


# Teaching Station: Weniger 116

1. Computer & Monitor:  
Mac or Windows
2. Crestron System Controller:  
Projector, Laptop, Lecture Capture,  
DVD, and DVI devices
3. Document Camera
4. Podium Height Controls
5. DVD Player
6. Presentation Support phone ONLY!  
Emergency **RED** phone located  
on wall.



## Crestron Features: Main Screen Menu

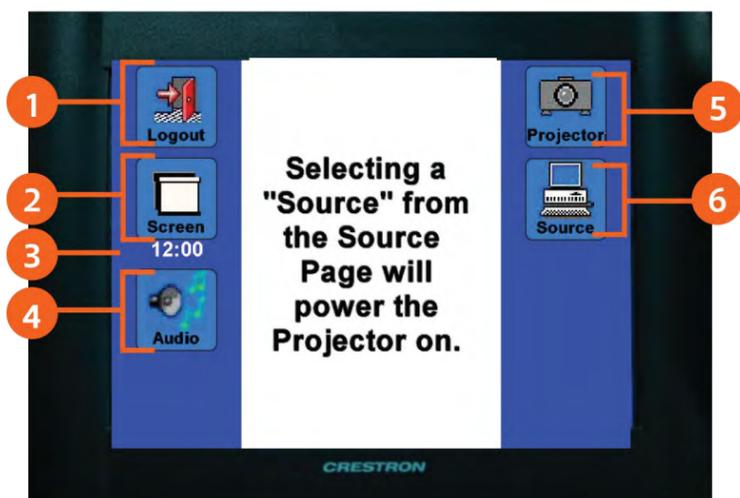

1. Logout
2. Screen Controls
3. Clock
4. Audio Controls
5. Projector Controls
6. Source Controls



## Document Camera / Visualizer



Use the tab to RAISE and LOWER the camera head, by pushing up or pulling down.



If this symbol appears in lower right corner of white platform, this can be used as a white board with dry erase pens – pens and eraser are not provided.



### Document Camera Head Controls

- Zoom Control:** Enlarge or shrink image
- Freeze Frame:** Image displayed will stay projected when "FREEZE" is selected. When pressed again, projector will display the new live current view.
- Focus- or Focus+:** Manual focus
- AF:** Auto focus
- Extern MENU:** Unassigned

# Teaching Station: Weniger 116

## Choosing a SOURCE to Display

The SOURCE button allows you to select the device you wish to use with the projector.

**Computer** (podium) (monitor is the computer. ON/OFF button is on the backside lower left).

**Doc Cam** (overhead camera to view 2D or 3D objects).

**VGA** (personal laptop) (use VGA cable from CABLE CUBBY directly behind Monitor/Computer. Adapters to VGA or DVI are not provided).

**Blu-Ray** (Blu-Ray Player (remote control is required to operate player)).

**DVI** (personal device) (use DVI cable from CABLE CUBBY directly behind Monitor/Computer. Adapters to VGA or DVI are not provided).

## AUDIO Controls

Select the AUDIO button from the main menu to access the audio controls for computer and microphone volume.

If there is no sound, make sure MUTE button has not been selected. From here you can control the speech or playback volumes using the buttons for each.

## SCREEN HEIGHT Controls

Select the SCREEN button from the main menu to access controls that allow you to raise or lower the projector screen. Switch is on the wall.

## PROJECTOR Display Options

Select the PROJECTOR button from the main menu to access options that affect what your audience is able to see on the projector screen.

**Blank Image:** Allows you to show a blank screen to the audience on the projector. You can still see and use your device, the audience cannot.

**Image Normal:** Reverses the Blank Image button. Audience can now see what is displayed on your device.

**Freeze On:** Freezes the image on the projector. You can still see and use your device, the audience only sees the frozen image.

**Freeze Off:** Reverses the Freeze On button. Audience can now see a live image of what is displayed on your device.

## DOC CAM Controls

From the main menu, select the SOURCE button, then from the source menu select the DOC CAM button.

## LOGOUT Control

Logging out of the Crestron controller is important to allow the equipment properly to cool down for the next user.

## RESTARTING Computer

Restarting the computer puts the computer back in a ready state for next lecturer.

