


Teaching Station: Kidder 350

1. Computer & Monitor:
Mac or Windows
2. Crestron System Controller:
Projector, Laptop, Lecture Capture,
DVD, and DVI devices
3. Document Camera
4. Podium Height Controls
5. DVD Player
6. Technology Help phone ONLY is
located on the right wall!
Emergency **RED** phone located
on wall to the left

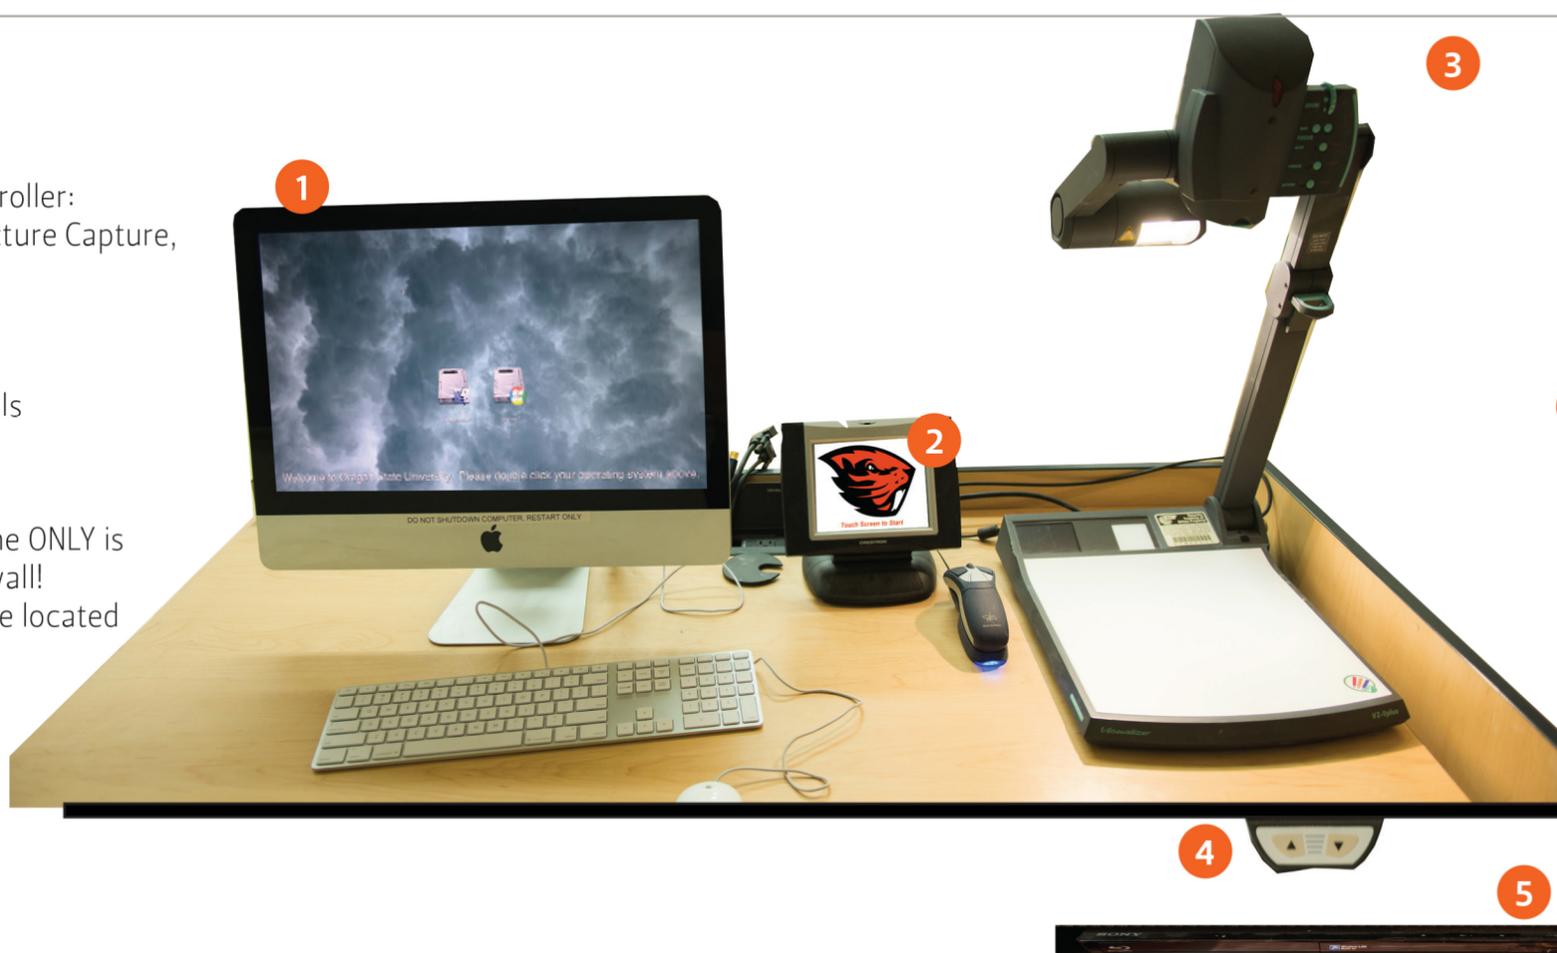

DVD Player is on right side of desk.

Crestron Features: Main Screen Menu



1. Projector Controls
2. Source Controls
3. Clock



Accessories Cable Cubby: Located directly behind computer. VGA, DVI, AUDIO cables. Adapters not provided.

Document Camera / Visualizer



To OPEN and CLOSE grab hand hook and push up or pull down.



If this symbol appears in lower right corner of white platform, this can be used as a white board with dry erase pens – pens and eraser are not provided.



Document Camera Head Controls

- Zoom Control:** Enlarge or shrink image
- Freeze Frame:** Image displayed will stay projected when “FREEZE” is selected. When re-pushed projector will display the new live current view.
- Focus- or Focus+:** Manual focus
- AF:** Auto focus
- Extern MENU:** Unassigned

Teaching Station: Kidder 350

Choosing a SOURCE to Display

The SOURCE button allows you to select the device you wish to use with the projector.



Computer on podium (monitor is the computer. ON/OFF button is on the backside lower left).



Document Camera/Visualizer (overhead camera to view 2D or 3D objects).



Connecting your personal laptop, use VGA cable from CABLE CUBBY directly behind Monitor/Computer. Adapters to VGA or DVI are not provided.




Connecting your personal laptop, use HDMI cable from CABLE CUBBY directly behind Monitor/Computer. VGA or DVI adapters are not provided.



DVD Player (remote control is required to operate player).

AUDIO Controls

Select the AUDIO button from the main menu to access the audio controls for computer and microphone volume.

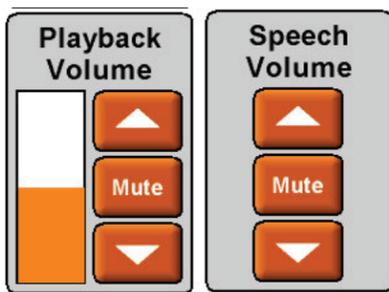


If there is no sound, make sure MUTE button has not been selected. From here you can control the speech or playback volumes using the buttons for each.

SCREEN HEIGHT Controls

Screen control on the wall to the left opposite side of the teaching station.

PROJECTOR Display Options

 Select the PROJECTOR/SOURCE button from the main menu to access options that affect what your audience is able to see on the projector screen.




Projector BLANK: Allows you to show a blank screen to the audience on the projector. You can still see and use your device, the audience cannot.

Projector FREEZE: Freezes the image on the projector. You can still see and use your device, the audience only sees the frozen image.

VISUALIZER Controls

From the main menu, select the SOURCE button, then from the source menu select the DOC CAM button.

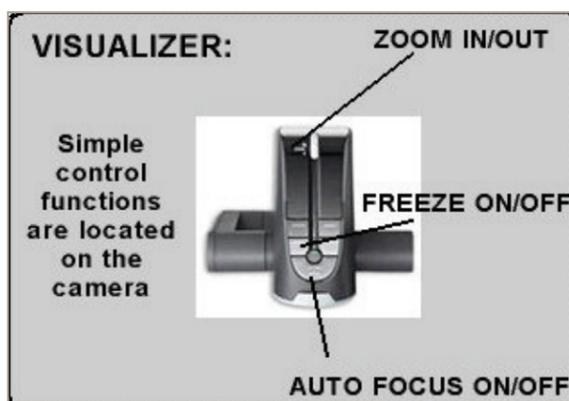



DVD/VHS/BLU-RAY Controls

From the main menu, select the SOURCE button, then select DVD or VHS source. Your projector will display from this device and the control panel will appear on the touch screen (you will need to remote to control the DVD player, however).



LOGOUT Control

Logout of the Crestron controller is important to allow the equipment to cool down for next lecturer to have equipment available.

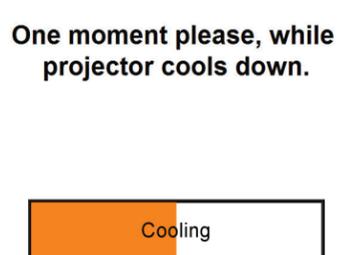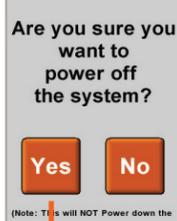

RESTARTING Computer

Restarting the computer puts the computer back in a ready state for next lecturer, if you only logout this can make the next presenter delayed as the system takes fair amount of time to reboot.

